


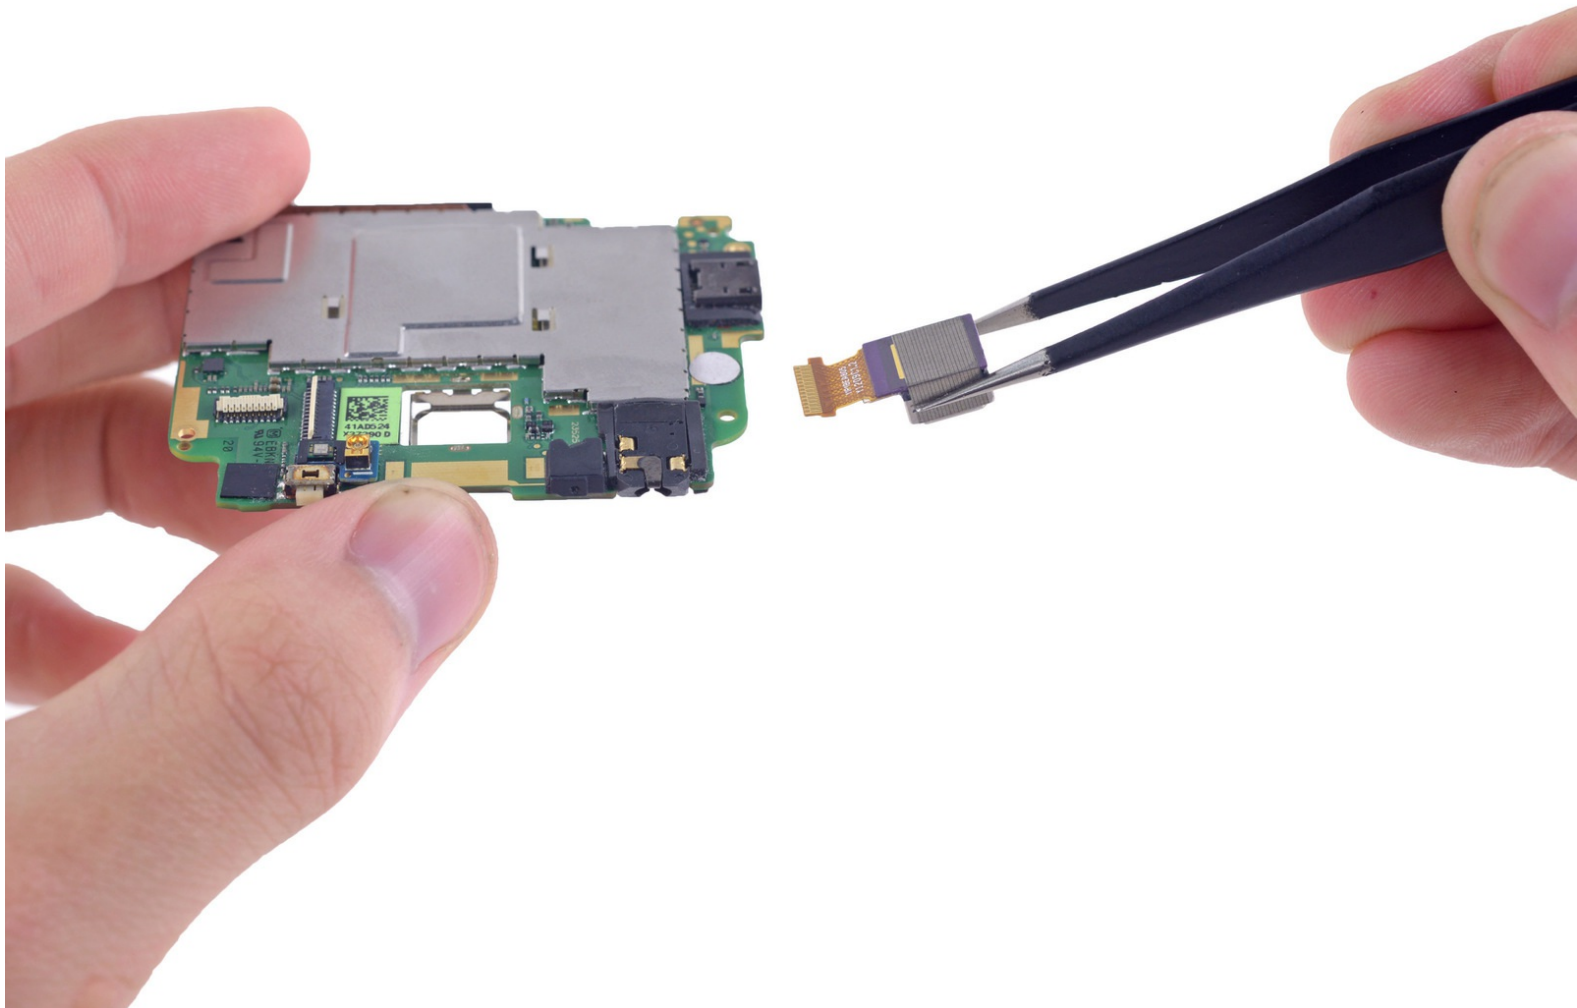

HTC One S Rear Facing Camera Replacement

This guide will teach you how to replace the rear camera on your HTC One S.

Written By: Jay Miley



INTRODUCTION

If your rear camera isn't working anymore, replace it using this guide.

TOOLS:

- [iFixit Opening Picks set of 6](#) (1)
 - [iOpener](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — iOpener Heating



- i** We recommend that you clean your microwave before proceeding, as any nasty gunk on the bottom may end up stuck to the iOpener.
- Place the iOpener in the center of the microwave.
- !** For carousel microwaves: Make sure the plate spins freely. If your iOpener gets stuck, it may overheat and burn.

Step 2




- Heat the iOpener for **thirty seconds**.
- Throughout the repair procedure, as the iOpener cools, reheat it in the microwave for an additional thirty seconds at a time.

- ⚠ Be careful not to overheat the iOpener during the repair. Overheating may cause the iOpener to burst.
- ⚠ Never touch the iOpener if it appears swollen.
- ⚠ If the iOpener is still too hot in the middle to touch, continue using it while waiting for it to cool down some more before reheating. A properly heated iOpener should stay warm for up to 10 minutes.

Step 3



- Remove the iOpener from the microwave, holding it by one of the two flat ends to avoid the hot center.

 The iOpener will be very hot, so be careful when handling it. Use an oven mitt if necessary.

Step 4 — Rear Case



- Handling it by the tag, place the heated iOpener across the bottom casing.
- ① Let the iOpener sit for at least a minute to soften the adhesive beneath the casing.

Step 5




- Gently place an opening pick in the corner of the gap between the bottom casing and rear case.
- Slide the opening pick along the side of the casing, prying it away from the adhesive as you go.

Step 6



- Use your fingers to pull the bottom casing off the rest of the phone.

Step 7

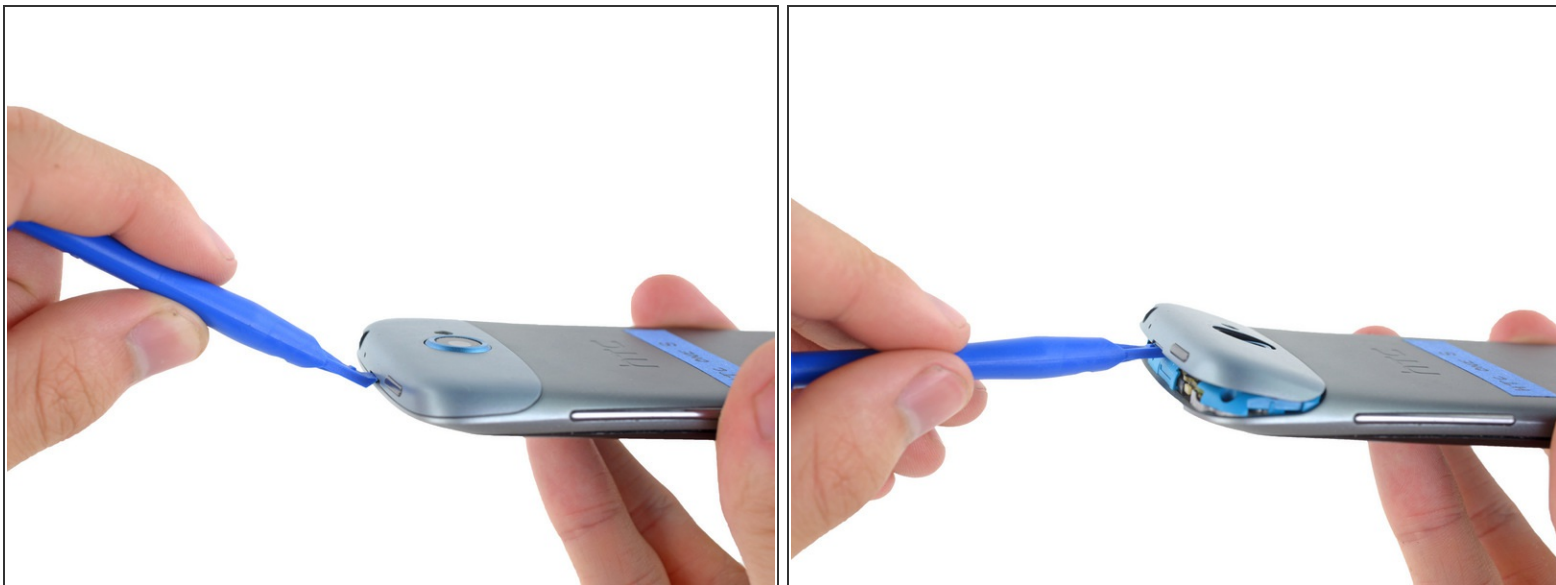

- Starting at the groove near the headphone jack, use a plastic opening tool to lift the top casing.

Step 8



- Use your fingers to pull the top casing off of the rest of the phone.

Step 9



- Remove the following screws holding the rear case to the rest of the phone:
 - Two 3.15 mm Phillips #00 screws
 - One 4.15 Torx T5 screw
 - One 4 mm Torx T5 screw

Step 10



- Place your fingers on either side of the phone and gently push up on the rear case.
- i** It is important to start from the bottom of the phone because the rear case wraps around the front of the phone at the top which makes it impossible to start prying from there.

Step 11



- Pull the rear case away from the rest of the phone with your hands.

Step 12 — Battery




- Using the pointed end of a spudger, lift the battery cable and release the connector.

Step 13




- Switching to the flat end of the spudger, work your way underneath the battery and peel it away from the adhesive.

Step 14

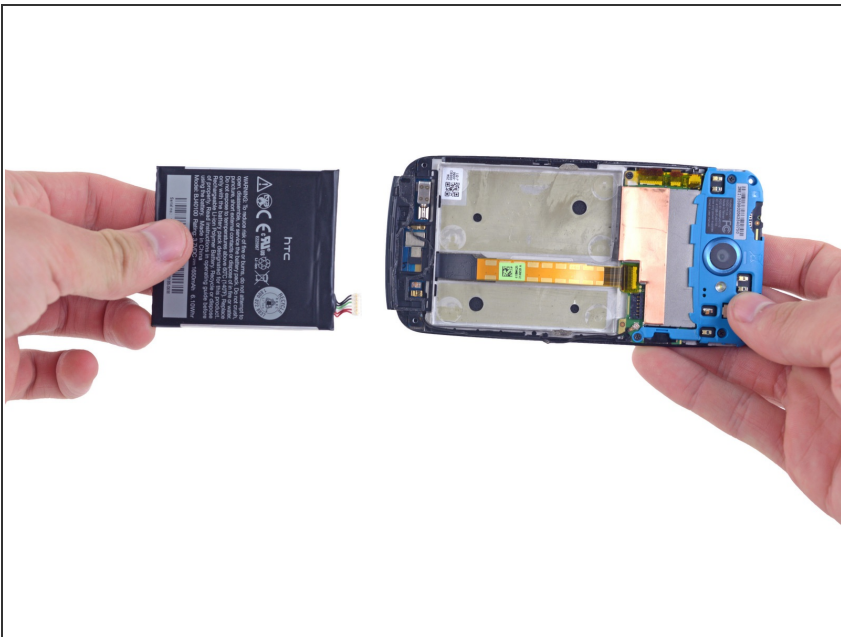



- Remove the battery from the phone.

Step 15 — Motherboard

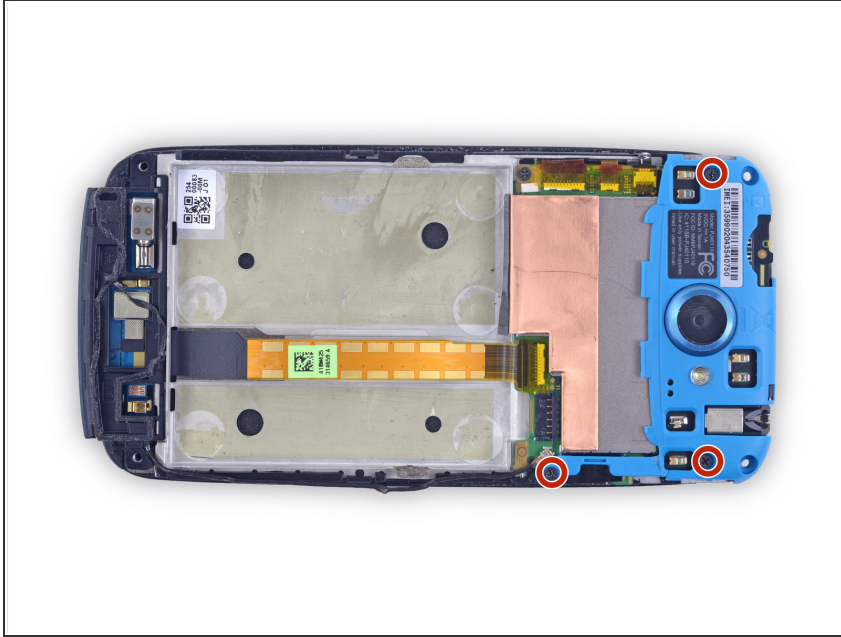


- Remove the three 3.15mm Phillips #00 screws from the turquoise case.

Step 16

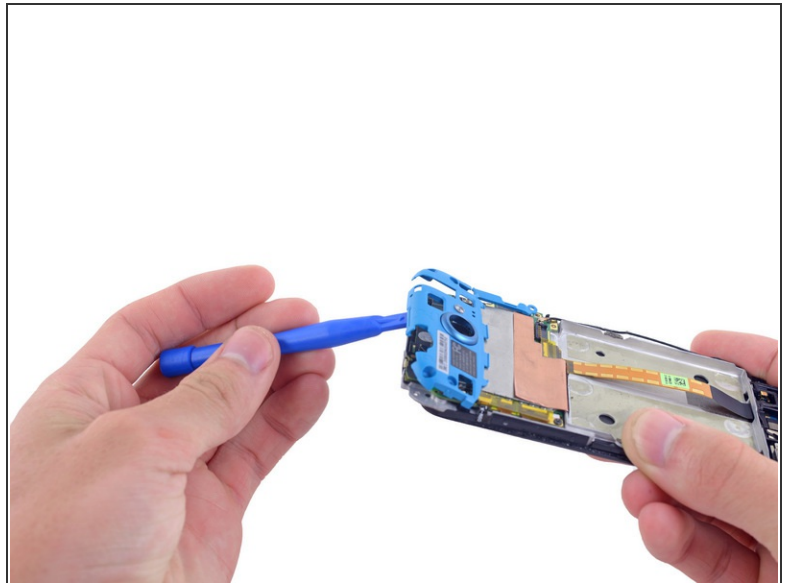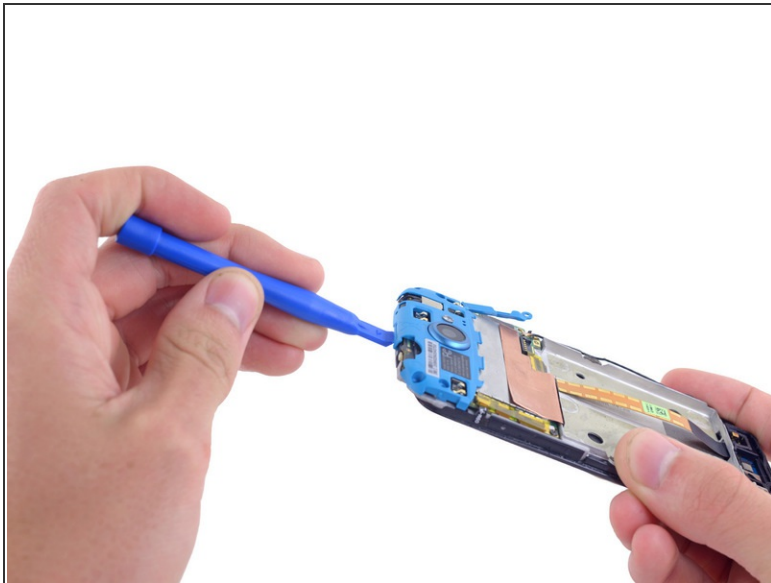



- Using a plastic opening tool, lift the turquoise case from the end near the headphone jack.

Step 17

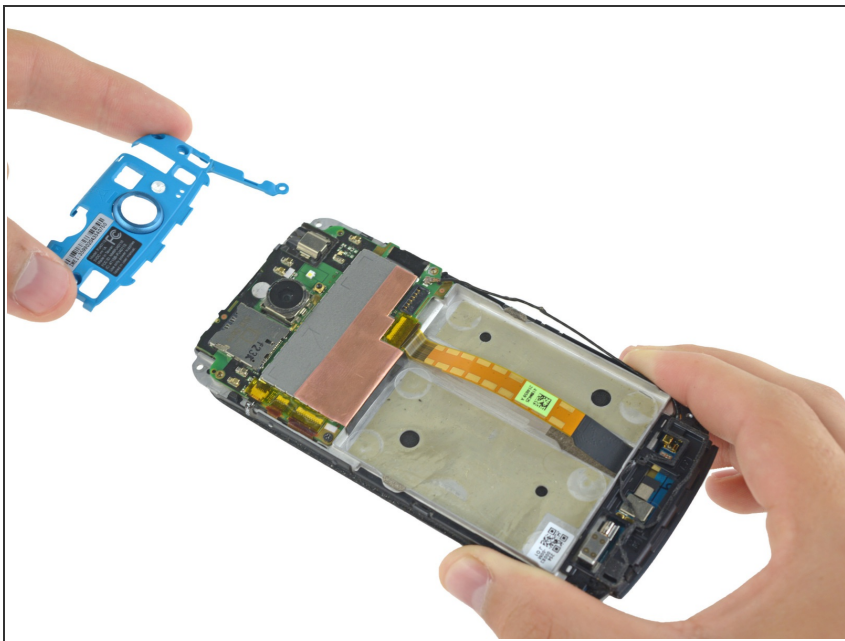


- Remove the turquoise cover from the phone.

Step 18

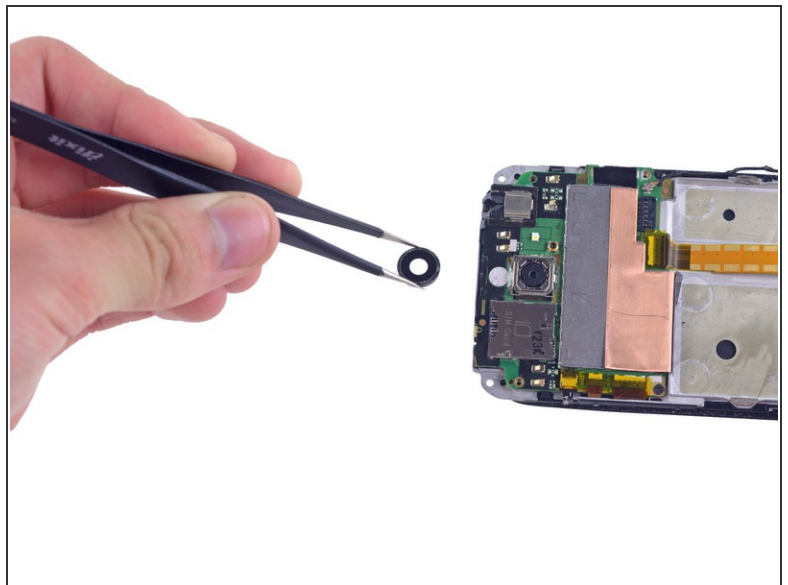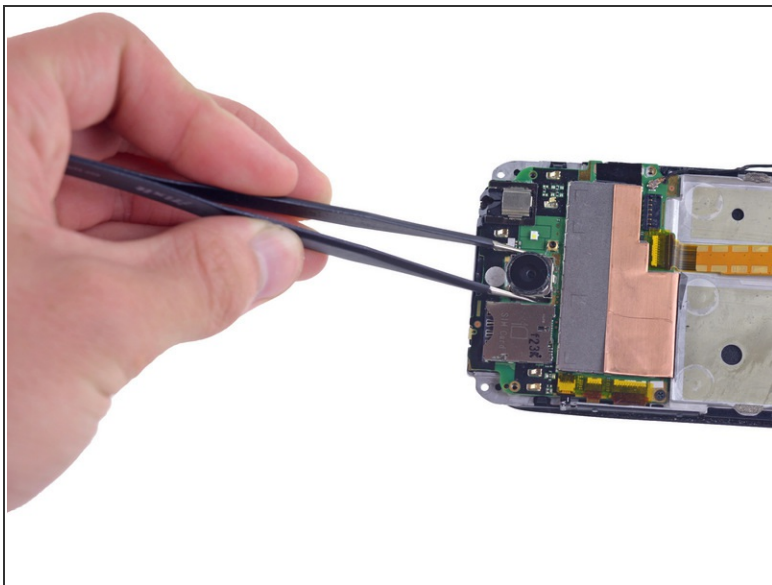


- A camera filter is now free to move, so remove it using tweezers.

Step 19

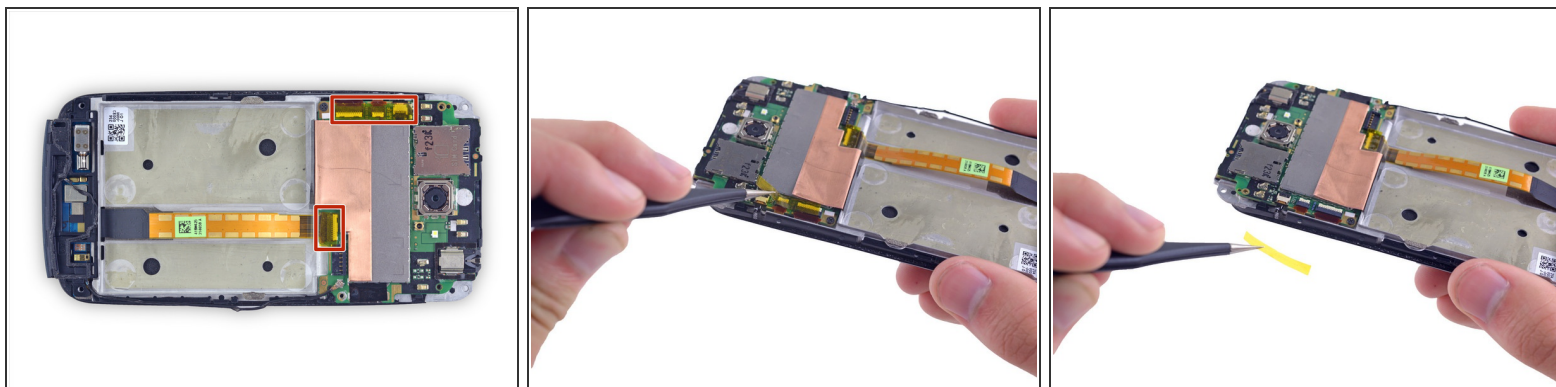


- Use tweezers to lift the yellow polyimide tape that covers the ZIF connectors.

Step 20

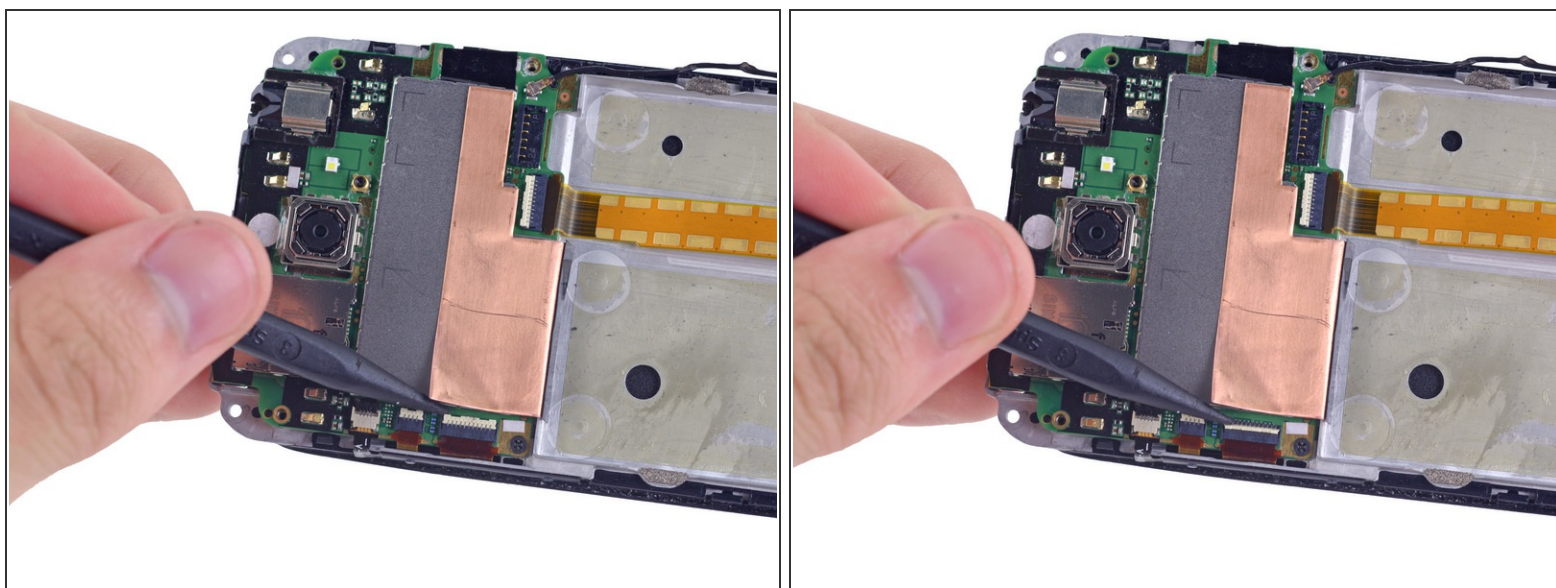


- Use the pointed end of a spudger to lift the white tab on the largest ZIF connector opposite the USB connector.

Step 21

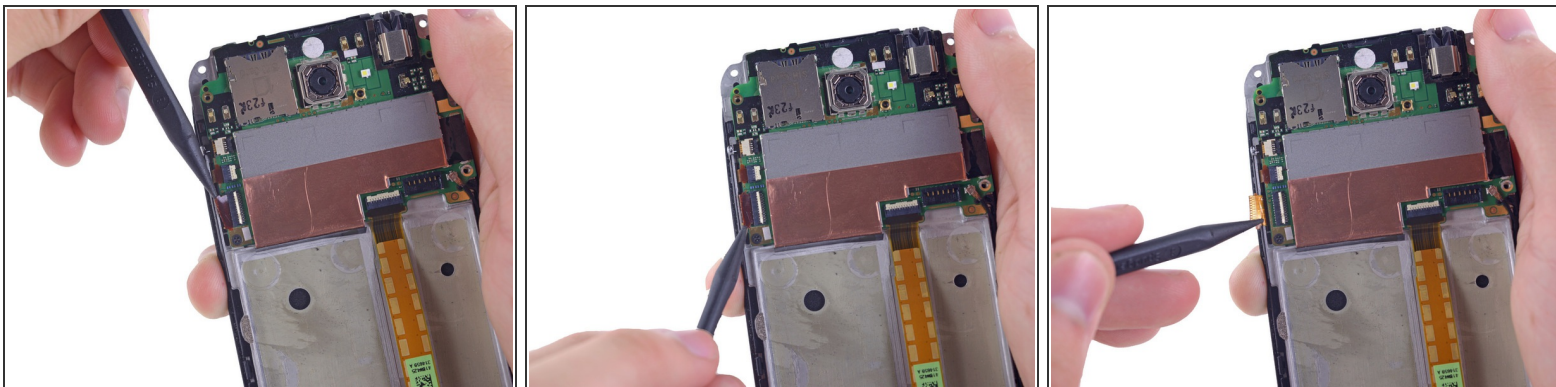


- Use the pointed edge of a spudger to work the ZIF cable out of its connector.
- ⓘ To do this, you may have to slowly work both sides until the whole cable is released.

Step 22

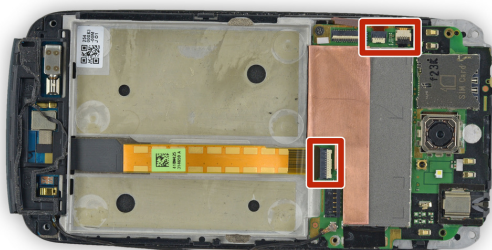

- Repeat the procedure from steps 19 and 20 to remove the cables from the remaining ZIF connectors.

Step 23

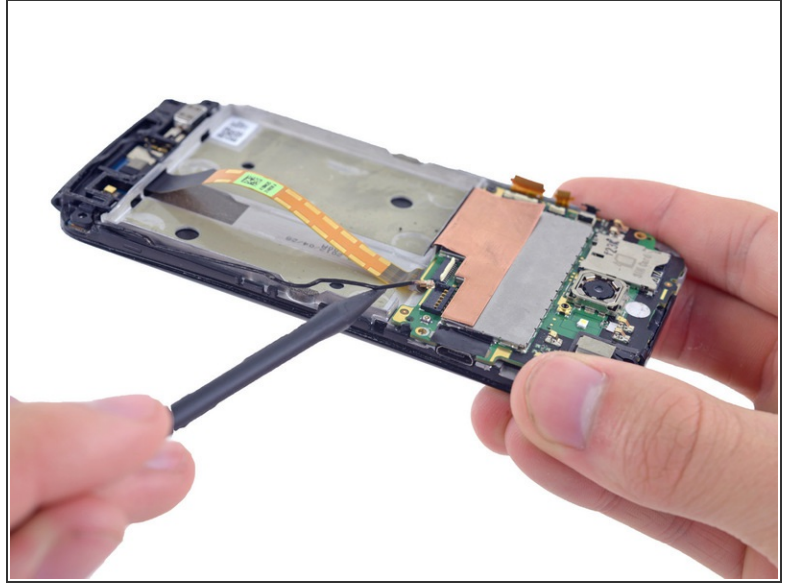


- Using the pointed end of the spudger, pop the antenna cable from its connector on the motherboard.

Step 24




- Remove the 3.15 mm Phillips #00 screw from the motherboard.

Step 25

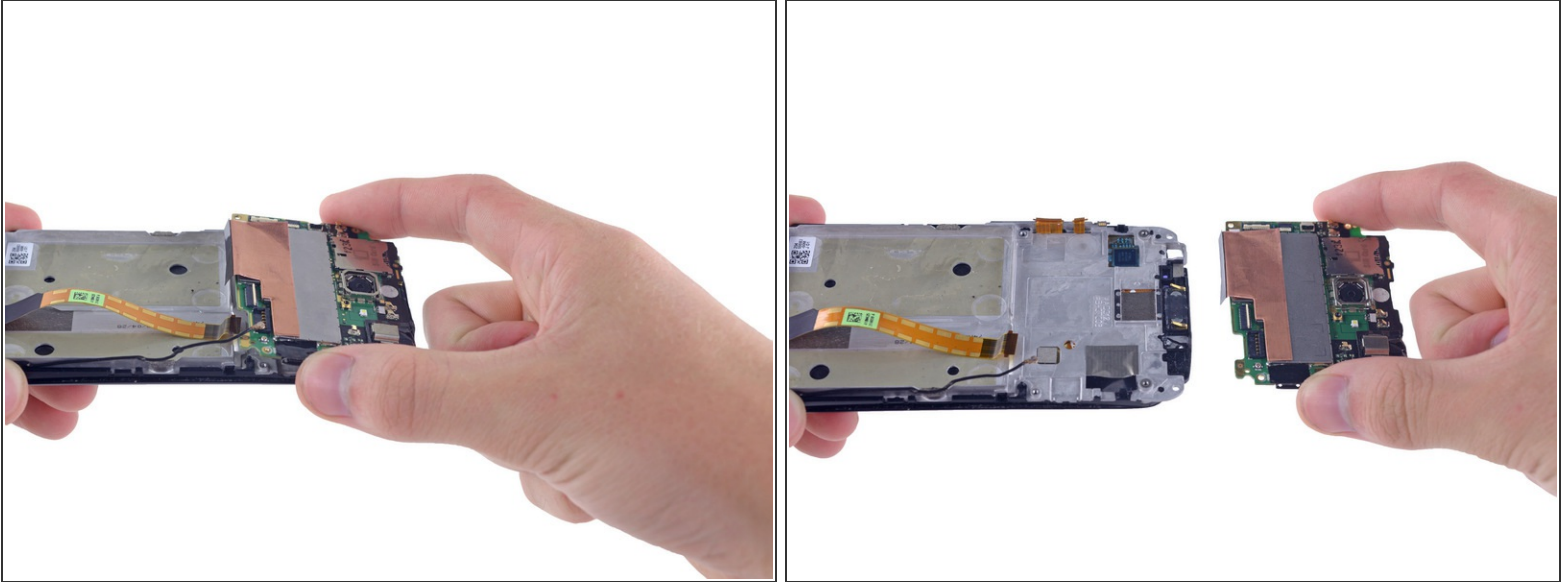


- Remove the motherboard from the rest of the phone.

Step 26 — Rear Facing Camera

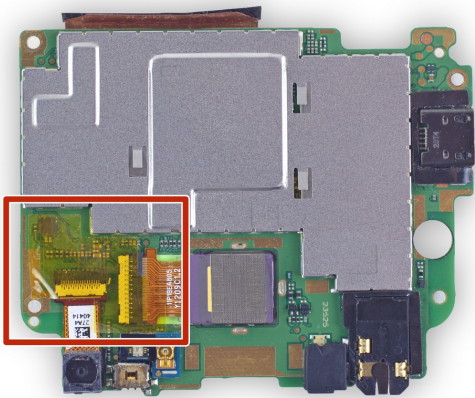


- Similar to step 18, remove the polyimide tape with tweezers.

Step 27

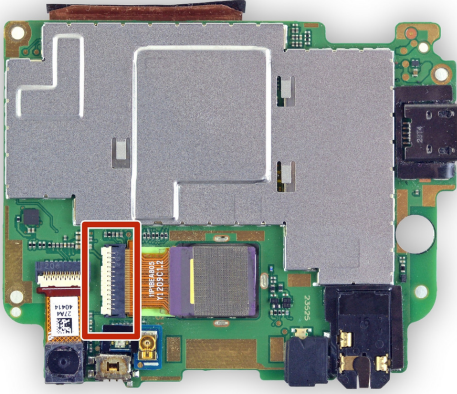

- Following the procedure from steps 19 & 20, open and disconnect the ZIF cable close to the center of the circuit board.

Step 28

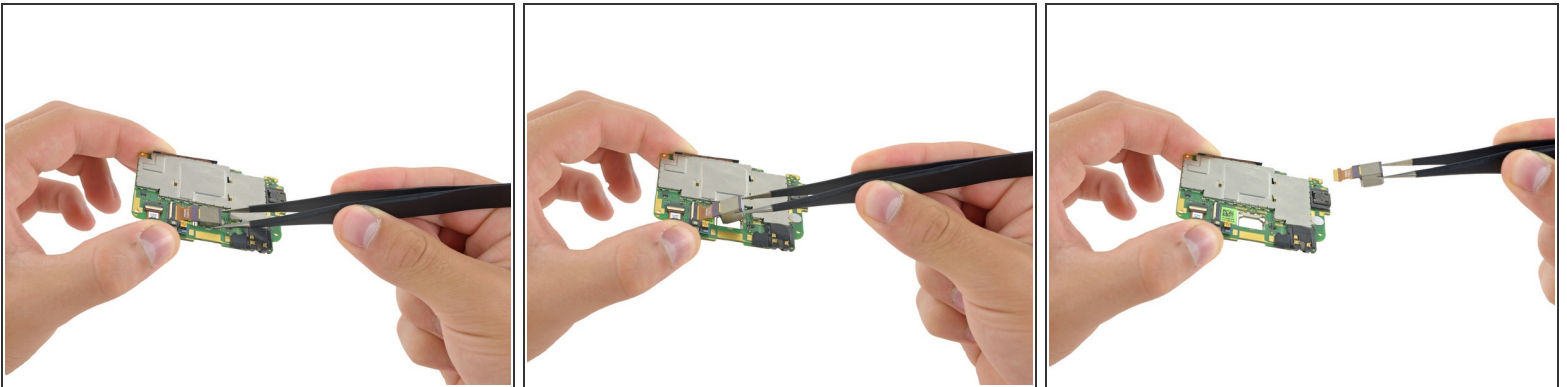

- Use tweezers to lift and remove the rear camera from the logic board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-28 11:49:05 AM.